



1. Put the pin in the side of the stand to hold the tension.

NOTE: This Step is incredibly important. If the rail is removed without inserting the tension pin first, the graphic will roll all the way inside the base.

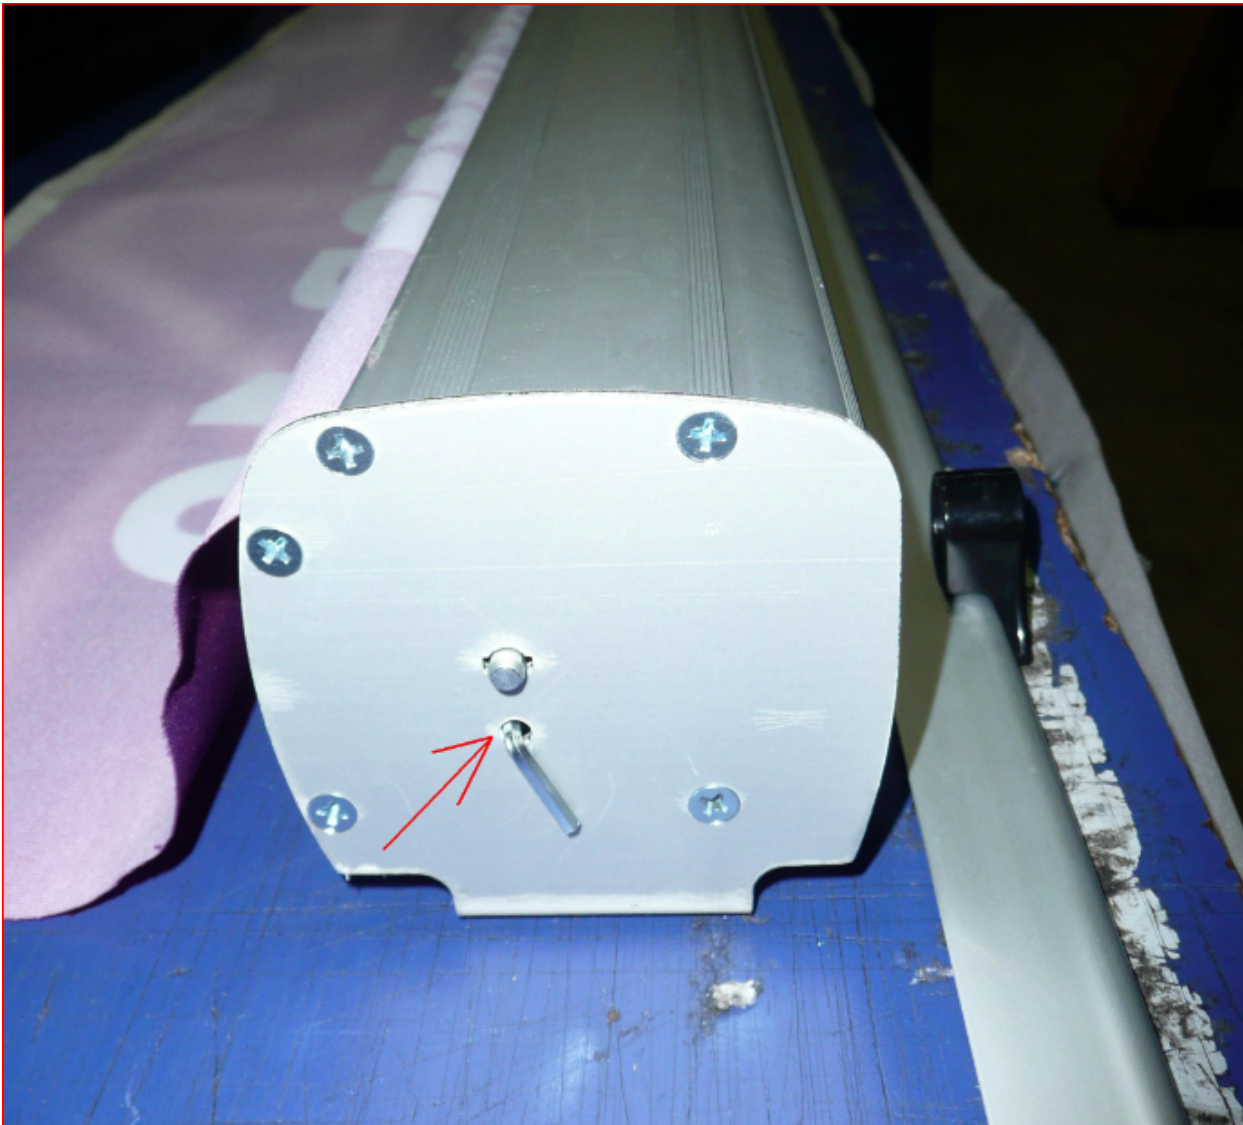


2. Remove the broken rail from the graphic by opening the 2 pieces of the clamp rail.

3. Open the 2 pieces of the new rail and begin sliding the graphic into the rail.

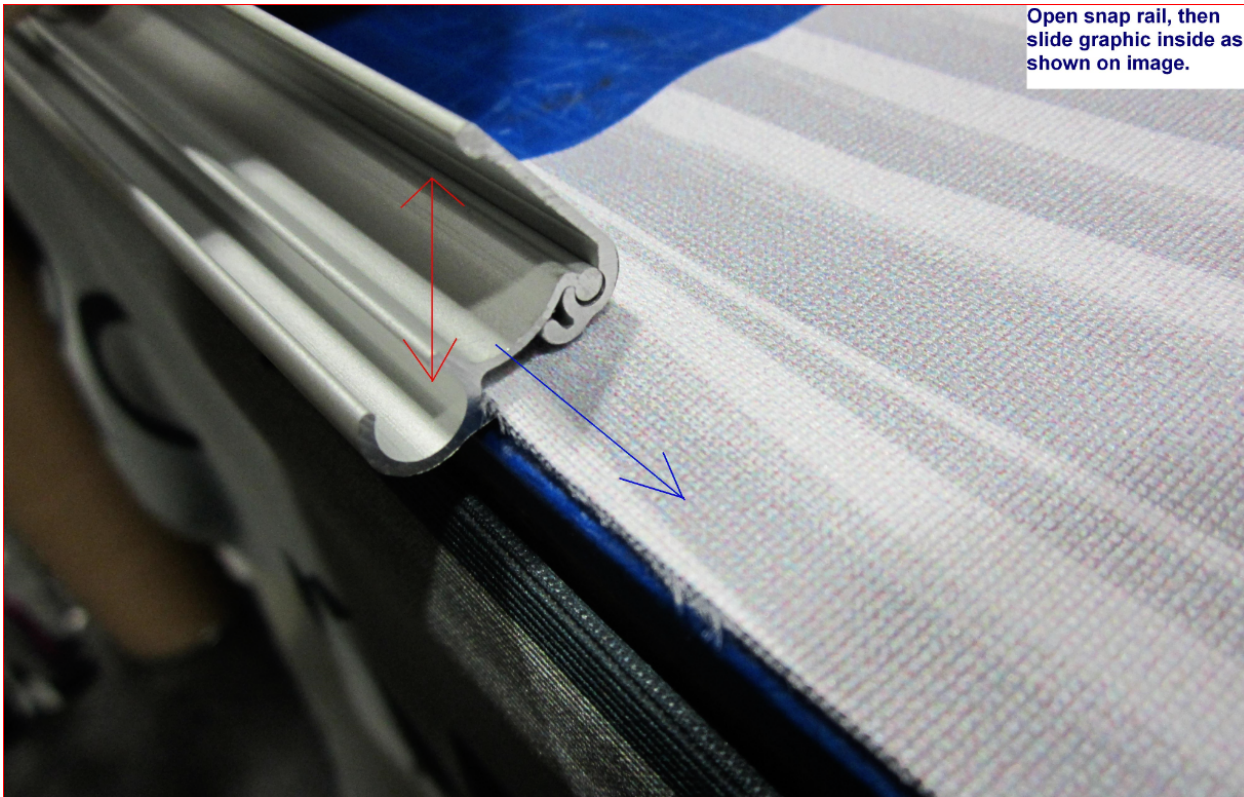

4. Once the rail is completely on the graphic, press down to close the rail securely on the graphic

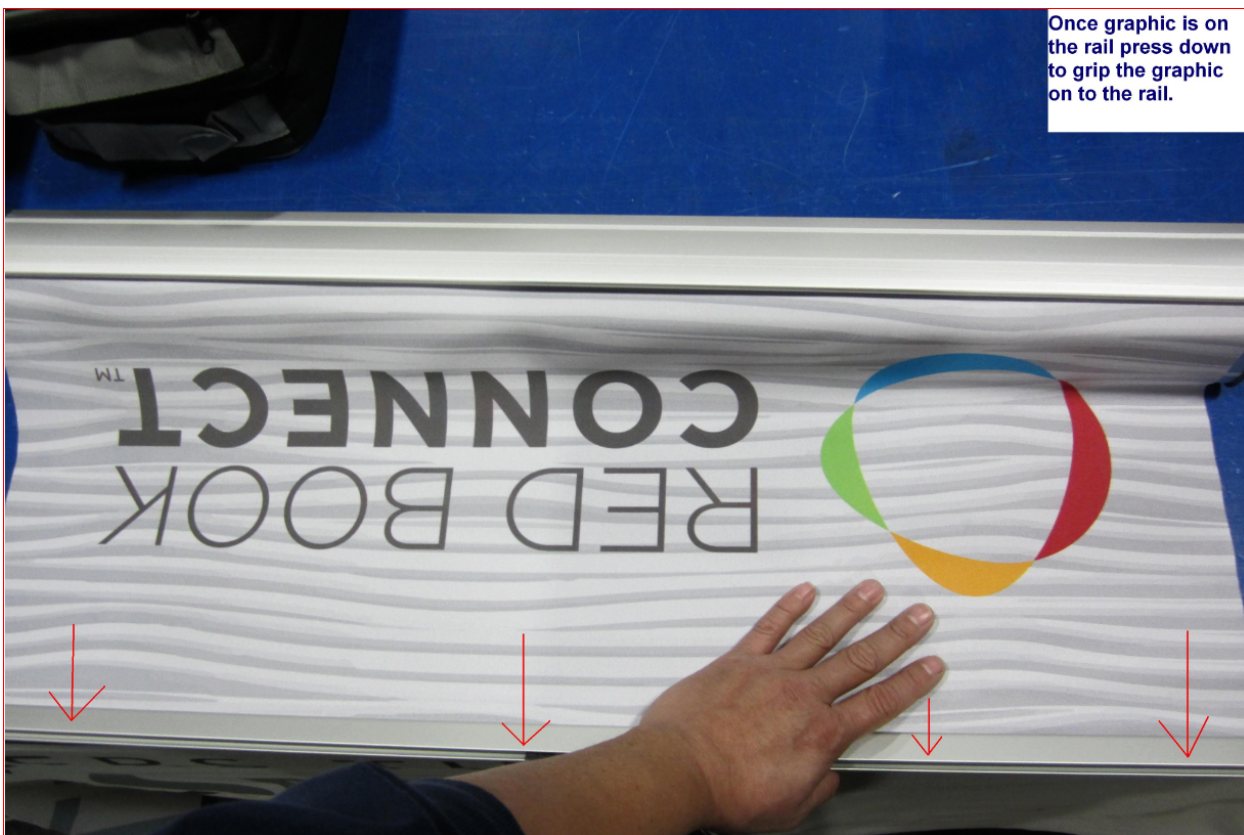

5. Once the new rail is snapped in place, it is safe to remove the tension pin.