

SET UP INSTRUCTIONS:

- CONNECT BOTTOM AND TOP RAILS OF SECTION "A" FOLLOWING THE LABELS
- CONNECT SIDE RAILS
- REPEAT STEPS 1 AND 2 FOR SECTION "B" AND "C"
- CLEAN THE FRAMES AND PLACE THEM ON CLEAN PLACE
- CAREFULLY REMOVE FABRIC COVERS FROM BAG
- PLACE COVERS AROUND THE BOTTOM OF THE FRAMES
- PULL COVERS CAREFULLY UP TO THE TOP
- CLOSE ALL ZIPPERS
- ADJUST FABRIC AROUND THE FRAMES
- CONNECT SECTIONS "A", "B" AND "C" TOGETHER AS SHOWN
- CONNECT CABLE HARNESS TO THE EYEBOLTS




BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

- UNZIP COVER ZIPPERS
- CAREFULLY REMOVE FABRIC COVER
- CLOSE ALL ZIPPERS
- FOLD OR ROLL NEATLY
- PLACE FABRIC IN COVER BAG


Frame Assembly
Assemble frame as shown

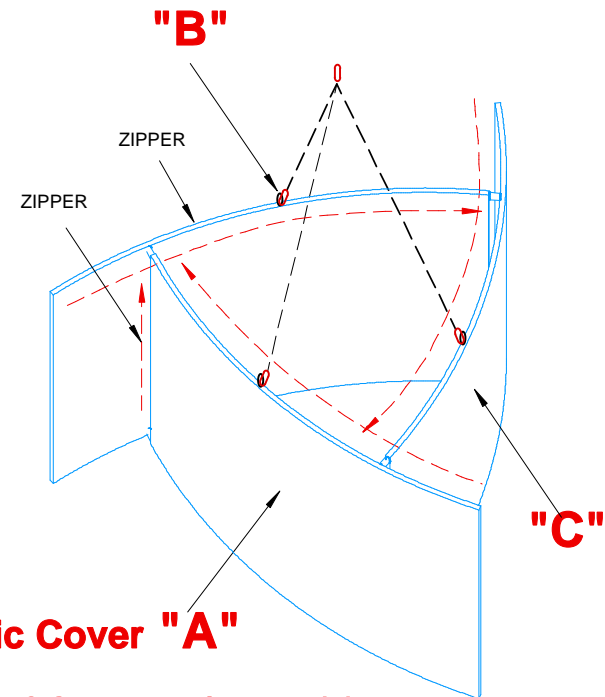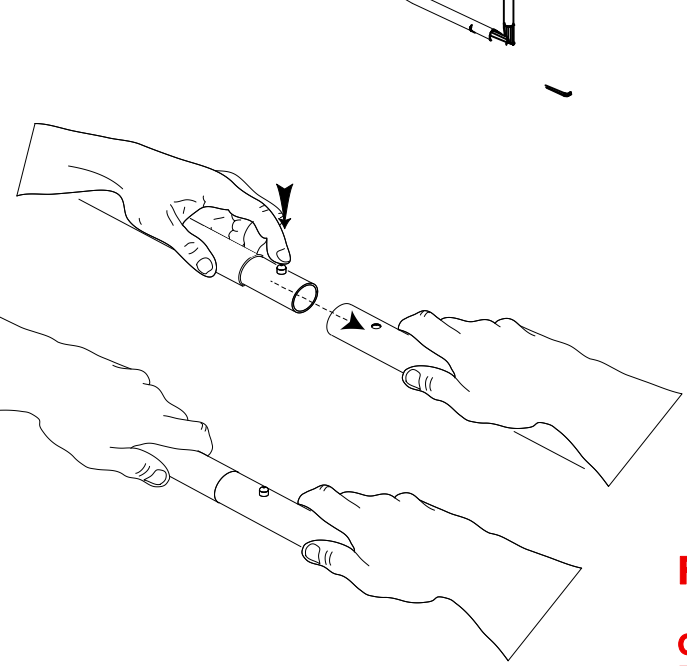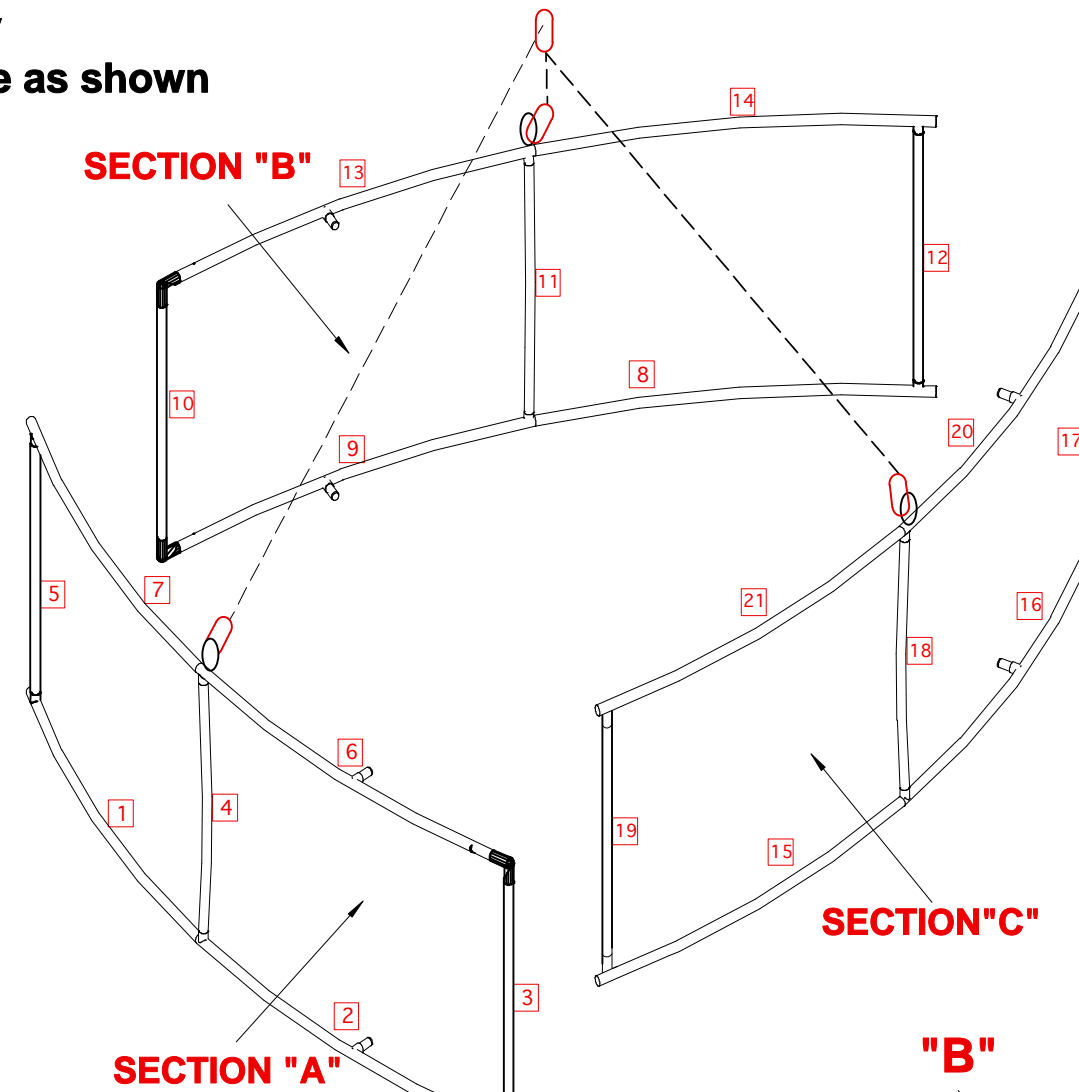

Fabric Cover "A"
GRAPHIC SIZE: 101 1/2" x 48"(V)
Fabric: 4417 (3) Panels
Add a 2" bleed on all sides

PILLOWCASE CONSTRUCTION

Frame parts

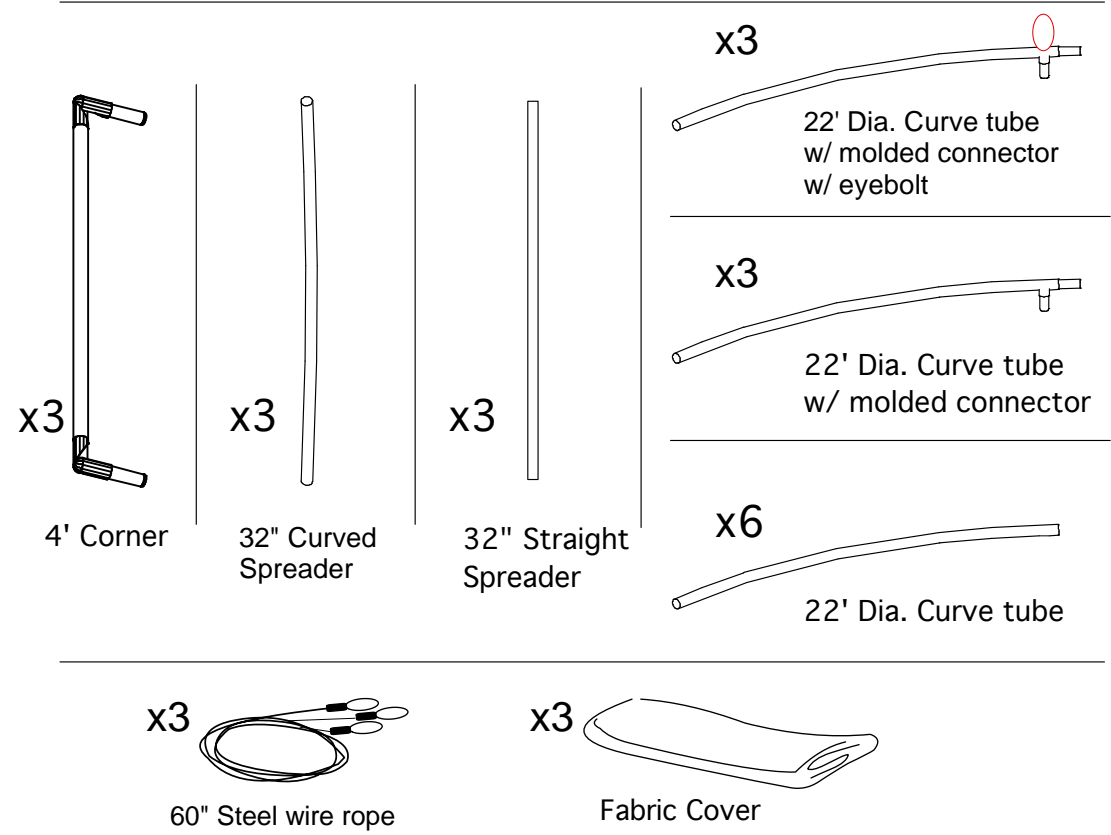

STRUCTURE #:
NF11-4

DIMENSIONS:
107" x 48" High
Curved pinwheel structure

GRAPHICS SIZE:
Printed outside only
(3) Panels
101 1/2" x 48" (V)

PACKING: MGC-50

DESCRIPTION:
Standard Fabric Structure

Frame constructed of 30mm tube w/ 30mm spreaders. ALL Tube parts to be made from 6063-T6 Aluminum 30mm extruded tube with .063" wall thickness (CLEAR ANODIZE FINISH). See part drawings for more information.
Frame assembles with snap buttons. Fabric cover is pillowcase construction with zipper on top side.
Weight with fabric 46 lbs.

Detailer	DD
File Name	NF11-4dm.mcd
Scale	N/A
Date	3/28/08

