

Instructions for changing a J-Hook on a OneFabric

Tools needed: Needle nose pliers and a j-hook


1. Remove bad j-hook if not already removed.
2. On new j-hook remove the small screw (if there) and use pliers to break off small unthreaded metal stem.



3. Once you have removed the small screw and stem from the j-hook it is ready to be used.
4. The Velcro will have a small hole for the “+” shaped metal stem to go through.



5. The metal stem will line up with the Black Plastic Hub and fit through the top hole. The side without the Velcro will be touching the black plastic hub. Screw the j-hook into the metal stem through the bottom of the hub. The metal stem will need to be pressed into the black plastic hub tightly so the j-hook reaches the metal stem.

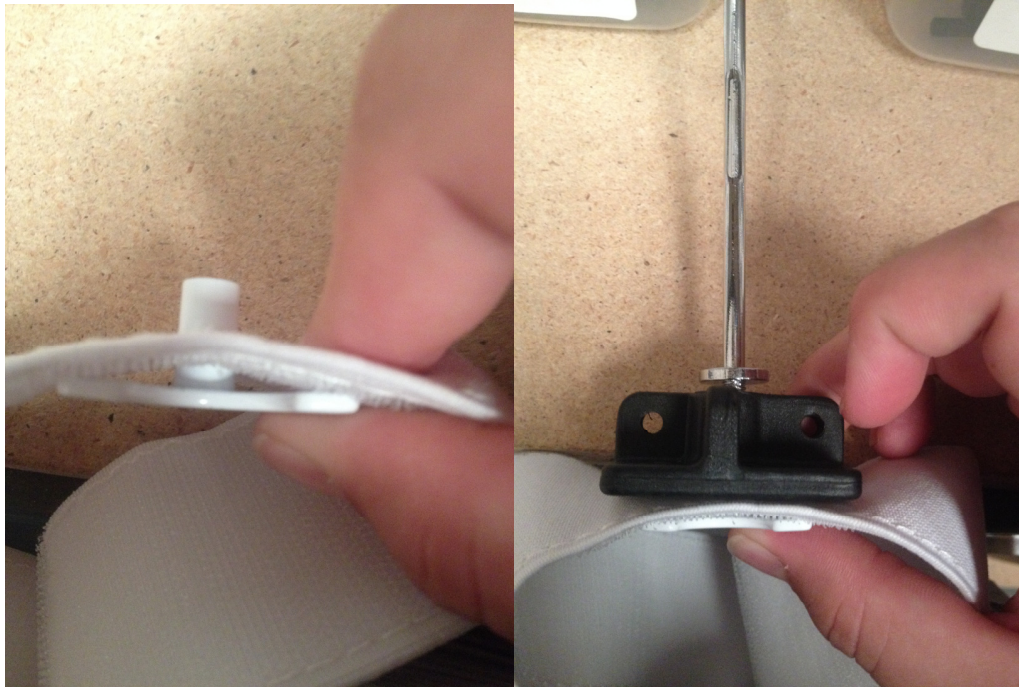

6. Once the j-hook reaches the metal stem it will start to tighten, attaching the Velcro to the frame. You will need the pliers to tighten the j-hook, tighten it just a bit past snug. At this point it will start to be difficult to turn anymore.
7. Once the j-hook is tightened make sure that it faces the opposite direction of the hook it connects to. The hooks shouldn't run perpendicular to each other, but instead face opposite directions. The hooks will not connect if they face the same way.