

# **Tusk - Leg Counter**

#### LN-CU-03

Dress up your space with sophisticated and functional counters. Counter tops are available in four thermoform finishes – silver, black, mahogany, and natural. Printed graphic panels create the base of the counter. Comes standard with a locking cabinet door. Custom counter top colors are available.



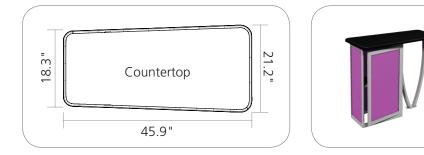



#### features and benefits

- Custom appearance - Easy to assemble
- Table top available in four finishes
- Locking door
- Internal shelf

- Installation tool included
- Aluminum frame construction
- Custom top and graphic colors available
- Legs can turn 90° for a different look
- Lifetime limited hardware warranty against manufactuer defects

#### dimensions

Hardware	Graphic	
Assembled Unit:	Total visual area:	
45.9"w x 39.2"h x 21.2"d approx.	Cabinet Front:	
1166mm(w) x 996mm(h) x 538mm(d)	21.31″w x 35.8″h	
	541mm(w) x 909mm(h)	
Interior Cabinet Dimensions:		
22"w x 38"h x 12"d approx.	Cabinet Back Door:	
559mm(w) x 965mm(h) x 305mm(d)	17.53″w x 32.18″h	
	445mm(w) x 817mm(h)	
Tabletop Dimensions:		
45.9"w x 1"h x 21.2"d approx.	Cabinet Sides:	
1166mm(w) x 25mm(h) x 538mm(d)	11"w x 35.8"h	
	279mm(w) x 909mm(h)	
Shipping	Refer to related graphic template for	
Shipping dimensions - ships in 2 boxes: Each box: 48"l x 24" w x 4" h 1219mm(l) x 610mm(w) x 102mm(h)	more information.	
Approximate shipping weight: 55 lbs / 25 kgs		


#### additional information


Graphic Material: UV prints on 6mm sintra Counter holds max 50 lbs / 23 kgs **Optional Shipping Case: OCH2** 

### Tabletop colors:




Parts Included		
Part Label	Qty	Part code
VC-01	x4	PH-280-S-S
VC-02	x1	CAB-01-FR
VC-03	x2	CAB-01-DR
VC-04	x2	CAB-01-SN-SD
Cabinet Front	x1	-
Cabinet Back	x1	-
Cabinet Side	x2	-
Internal Shelf	x1	-
Shelf Support	x4	-
V-CU-CT-01	x1	V-CU-CT-01
Tool kit	x1	V-TK-01

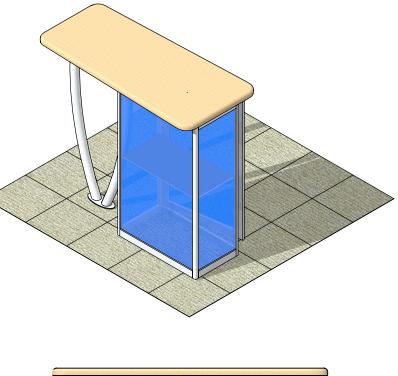

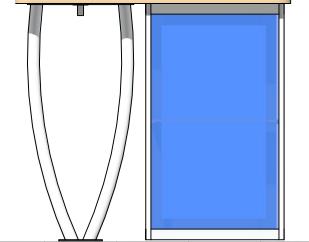


#### Step 1.

Attach the cabinet front (VC-02) and back (VC-03) using the VC-01s. See attachment detail below. Be sure to only turn locks half a turn as not to strip them.

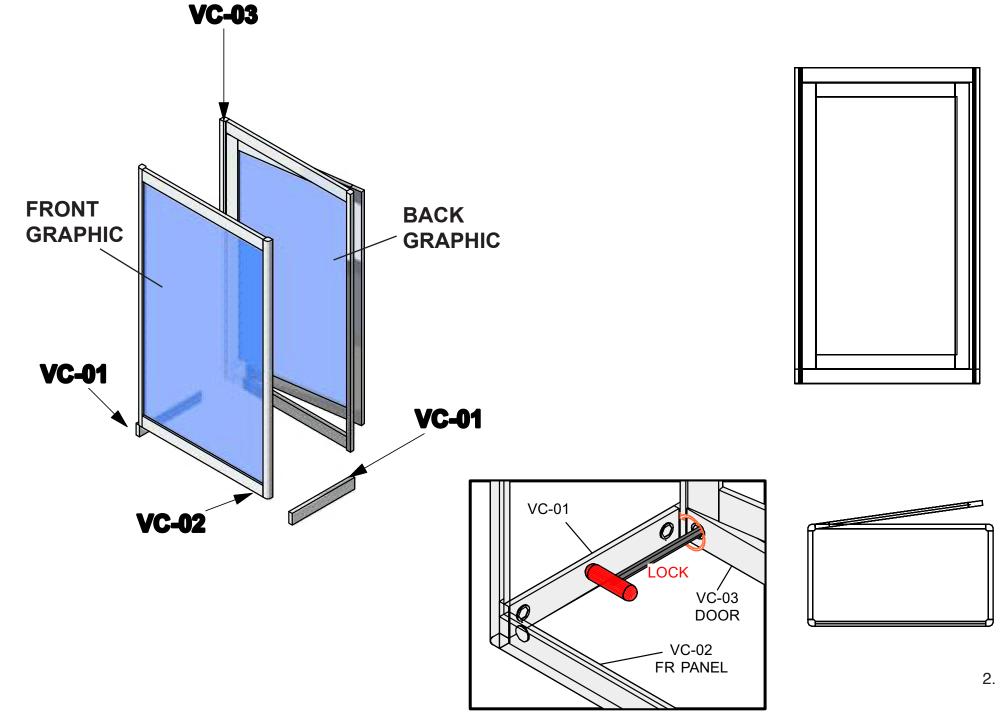





Slide the side graphics into the VC-01s and secure in place by securing a VC-01 over the top in the graphic. Insert shelf supports using detail below and gently place internal shelf on the supports.

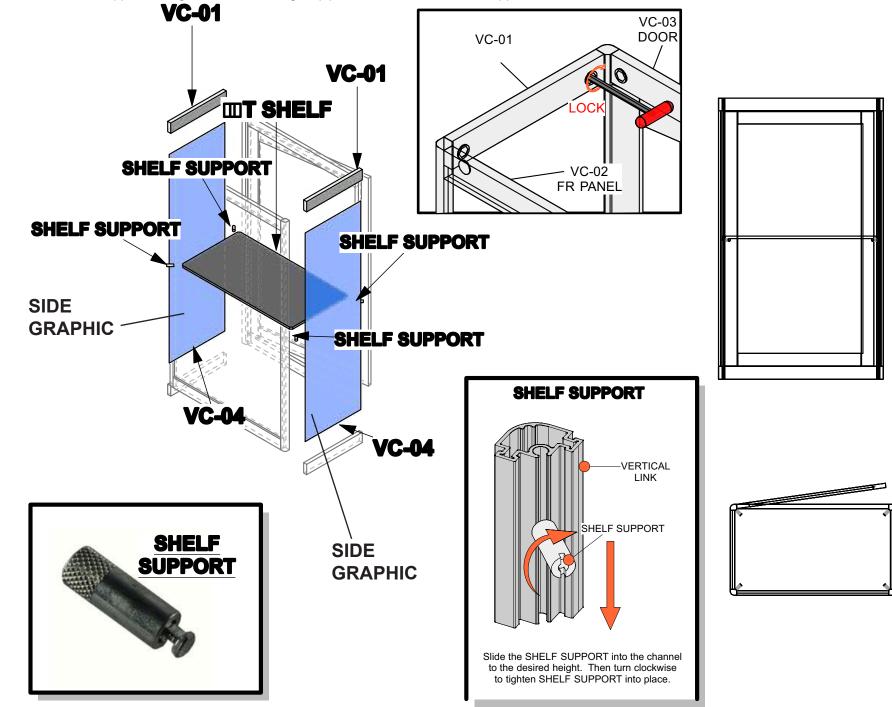



Step 3. Attach legs to counter using thumb screws. Attach completed countertop to cabinet base.

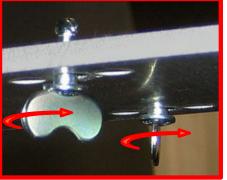

Insert the thumb connector into the bottom of the counter top and make a 1/4 turn clockwise to tighten in place.

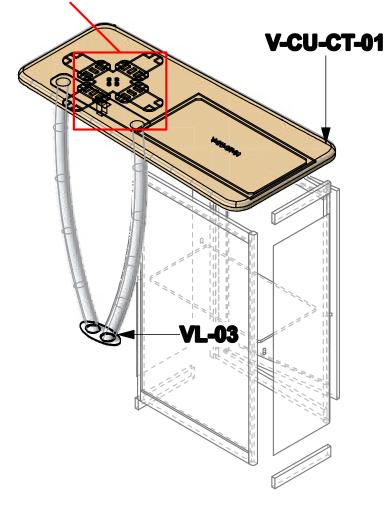

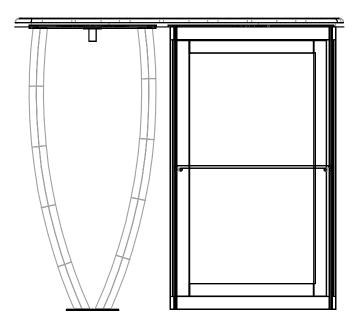

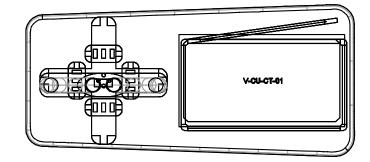

## **Linear Counters**

